



Shenzhen Meideal Musical Instruments co.,Ltd  
Add:Shenzhen,China Web:www.meideal.com

 
## Thanks for using M50 M50 USER MANUAL

Optional Colors: ☐ dark gray ☐ White ☐ Beige  
☐ See-through Pink ☐ See-through Blue


### Advantages

- ★ M50 is a professional mini metronome.
- ★ Multi-functional, easy to use.
- ★ Tap function enables you to test your ideal tempo or tempo of a track.
- ★ Stereo earphone jack is available.
- ★ Clip and lanyard hole design, easy to carry and easy to fix.

### Product description

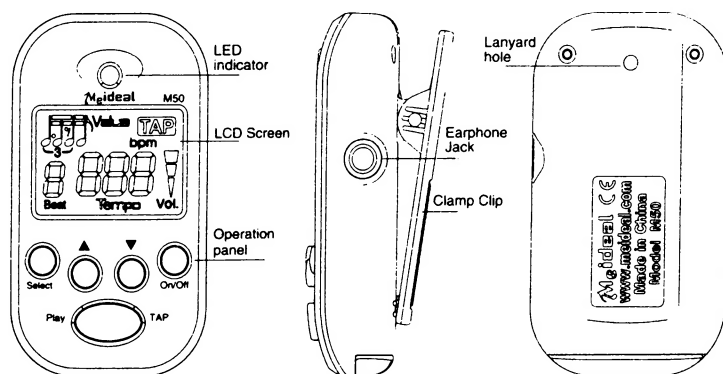


( 1 ) Operation panel and instruction

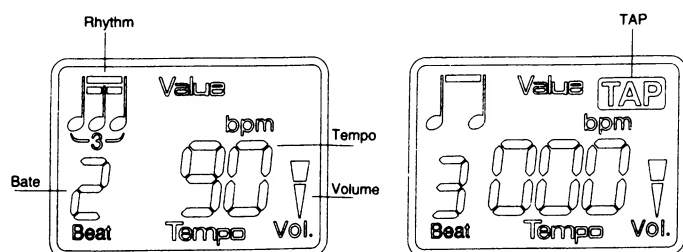 

(A) Metronome mode

(B) TAP mode

 ( 2 ) Display screen and instruction

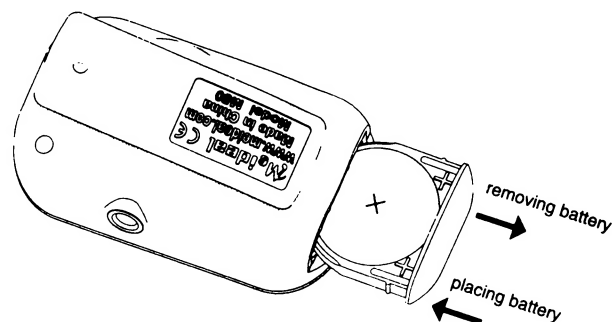

Please note the polarity of battery as showing

### ( 3 ) Install and uninstall the batteries

### Product Instructions

- 1、Install (or replace) batteries as instruction picture (3).
- 2、Press "On/Off" to turn on(off) the machine, **the default mode is Metronome. Press "Play" button to start or pause the metronome sound.** The machine will turn off automatically without any operation within 3 minutes
- 3、Setting Parameters: (1) Press "Select" button to adjust the parameters of the selected items in the order of : Tempo -- Beat -- Value -- Vol., Parameters of the selected item will have flash tips (2) After the item is selected , press " ▲ ▼ " will scroll up or down to determine the desired parameters, long time press to adjust the item.
- 4、Under "on" status, press "Play" button to start or pause the sound. Long press the button to active TAP function, press this button again to operate the TAP function. Switch back to Metronome mode, you' ll use the tempo you just tapped.After active tap function, "select" and " ▲ ▼ " function key is invalid.
- 5、The LED shines brighter in strong beat, less brighter when indicates the weak beat.
- 6、Plug in the earphone, the speaker will stop deliver the sound, you may listen to the metronome sound by earphone.

### Specification:

- Rhythm Types: ♩ ♪ ♫ ♬ ♪ ♩
- Tempo: 30 to 280 bpm
- Beat Value: 0, 1, 2, 3, 4, 5, 6, 7, 8, 9.
- Volume adjustment: maximum volume; medium volume; minimum volume; Mute
- Accuracy:  $\pm 1/1000$
- Size: 55.8 x 31 x 12.9 mm
- Power Supply: 3V Cell Battery x 1 piece
- Weight: 23g

### Caution:

- ( 1 ) Do not use alcohol, gasoline and other strong cleaning chemicals to lean the LCD screen or body case.
- ( 2 ) Do not hit or the body case or screen beside the top. Otherwise it will lead to machine failure.
- ( 3 ) Do not use or keep at high temperature, heat, humidity place.
- ( 4 ) Please make sure the battery is under correct positive and negative side before fixing in.
- ( 5 ) If un-normal sight show up, pls remove the battery and wait 10 seconds to reload.
- ( 6 ) Take the battery out if longtime no use.
- ( 7 ) Pls change the battery if characters appear dark or stroke incompletely shows. Do not throw batteries away as ordinary rubbish.
- ( 8 ) If the product needs to improve and upgrade, change without prior notice

### Accessories in the packaging

- 1、Standard accessories: 1 set manual, 1 pc M50 machine, 1pc "2032" Button Battery
- 2、Optional accessories: 1 pair of stereo earphone and 1 pc lanyard (Note: Optional accessories require additional purchase)



深圳美妙音乐器材有限公司  
地址：中国深圳 网址：www.meideal.com

美妙演绎  
不同凡响

 
## 非常感谢您使用M50 M50产品使用说明书

产品颜色：☐ 深灰色 ☐ 米白色 ☐ 浅黄色  
☐ 透明粉红色 ☐ 透明蓝色


### 产品特点

- ★ M50是一款迷你的专业节拍器。
- ★ 产品功能丰富，使用操作简单。
- ★ 产品具有敲击节拍测速功能：TAP功能，能准确测试您自己心中的节拍速度或一首曲的节拍速度。
- ★ 产品设计有双声道耳机输出。
- ★ 产品背面具有夹子和挂绳孔结构设计，方便固定。


### 产品图示说明

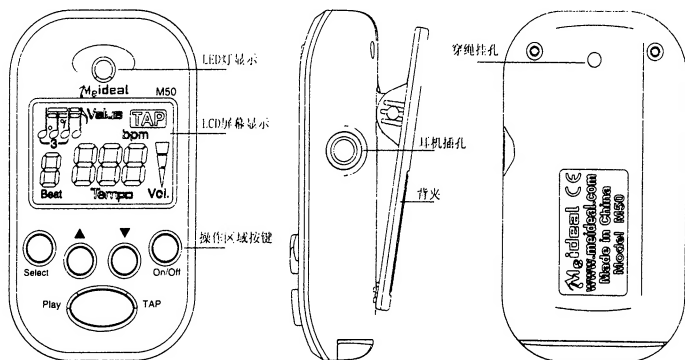

 (1) 操作面板功能位置及说明

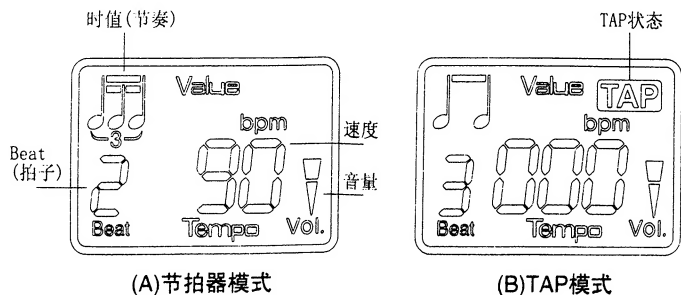

 (2) 显示界面及说明

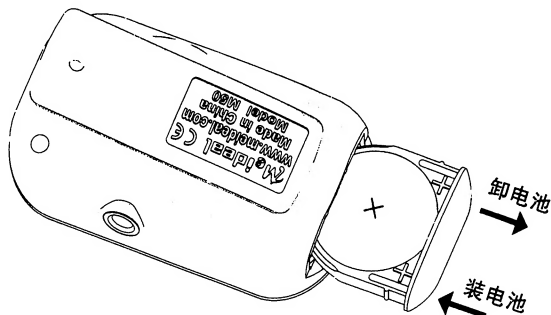

注意电池正极方向（如图所示）

### (3) 安装与更换电池方法

### 产品操作说明

- 1、安装（或更换）电池，如图示：产品图示说明（3）
- 2、开机：轻按“On/Off”键为开机（或关机），开机后机器在默认是节拍器功能，轻按“Play”键将开始打节拍或暂停打节拍。机器3分钟内没有任何操作或运行则自动关机。
- 3、调整参数：（1）轻按“Select”键即选择需要调整的参数项目顺序为：Tempo--Beat--Value--Vol.，被选择的项目参数将闪烁提示（2）项目被选择后，轻按“（▲▼）”将向上或向下滚动确定所需的参数值，长按则快速调整该项目。
- 4、在开机状态下：轻按“Play”键将暂停打节拍或开始打节拍。长按该按键将激活TAP功能，之后轻按敲击该按键即使用TAP功能。完成后再次长按该按键将切换到节拍器功能，即按测定的速度打节拍。注意：（1）在激活TAP功能后，“Select”和“（▲▼）”按键的功能无效。（2）长按该按键是互相切换节拍器功能和TAP功能。
- 5、节拍器打重拍时指示灯(LED)为高亮；轻拍时指示灯(LED)为微亮。
- 6、插上耳机时，打节拍外放声音停止，耳机喇叭发声打节拍。

### 产品技术参数

- 节奏类型：♪ ♪ ♪ ♪ ♪ ♪ ♪
- 速度范围：30---280bpm
- 拍子变化：0, 1, 2, 3, 4, 5, 6, 7, 8, 9。
- 音量调整：最大音量；中等音量；最小音量；静音
- 精确度：±0.001（千分之一）
- 产品体积：55.8mmX32mmX12.9(23)mm
- 电源：3V（2032纽扣电池1粒）。
- 重量：23克

### 注意事项

- （1）请勿用酒精，汽油及其他强烈化学试剂擦拭液晶屏或机壳，
- （2）请勿敲击机壳或液晶屏，否则会导致机器故障。
- （3）勿在高温，发热，潮湿之处使用和保管。
- （4）装入电池时请先确认电池正确的正负极放入方向。
- （5）若出现异常显示现象请取出电池并等待10秒钟后重新装入。
- （6）长时间不使用机器时请将电池取出。
- （7）液晶上字符显示混暗或笔画不全时请更新电池，废弃电池请勿当作普通垃圾随意丢弃。
- （8）若是产品进行改良升级，不事先通知而变更。

### M50包装内附件

标准附件：一台M50机器、一份说明书、一颗“2032”纽扣电池  
可选附件：一根挂绳、一付双声道耳机（注意：可选附件需要另外购买）